



Infant Optics DXR-5 Camera Replacement

The purpose of this guide is to show the steps required to replace the camera of the camera unit for the Infant Optics DXR-5.

Written By: Charles Neal



INTRODUCTION

Ensure that the camera unit is unplugged prior to starting this guide.

Secure screws to avoid losing them.


Screws are small and can pose a possible choking hazard for small children.



TOOLS:



- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Camera

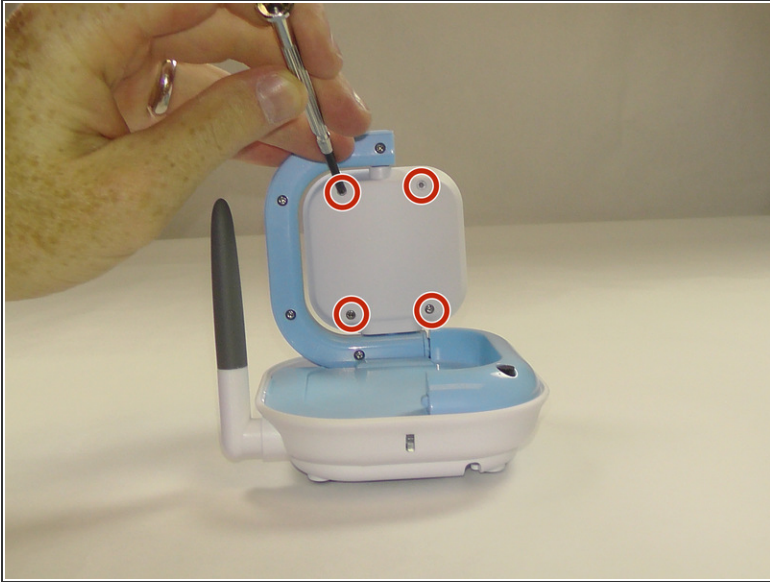



- Using a Phillips #2 screwdriver, remove the four, 6.0 mm Phillips screws from the back of the camera unit.

Step 2

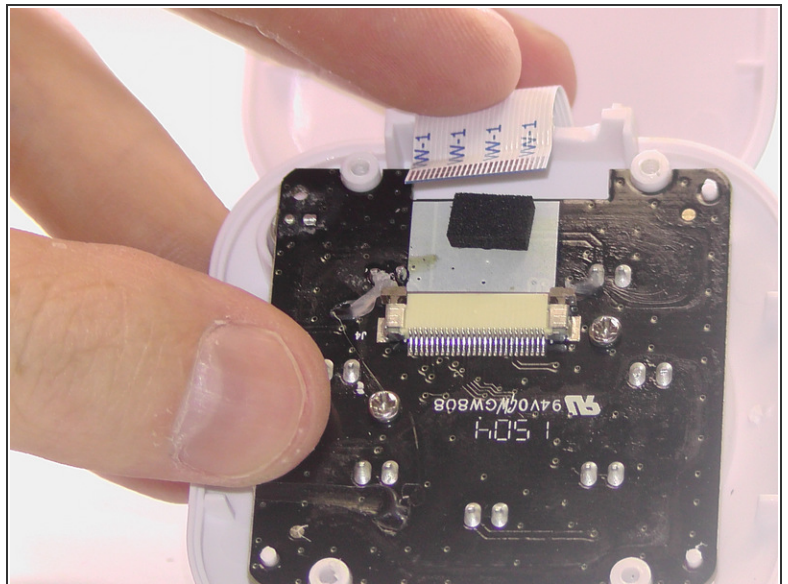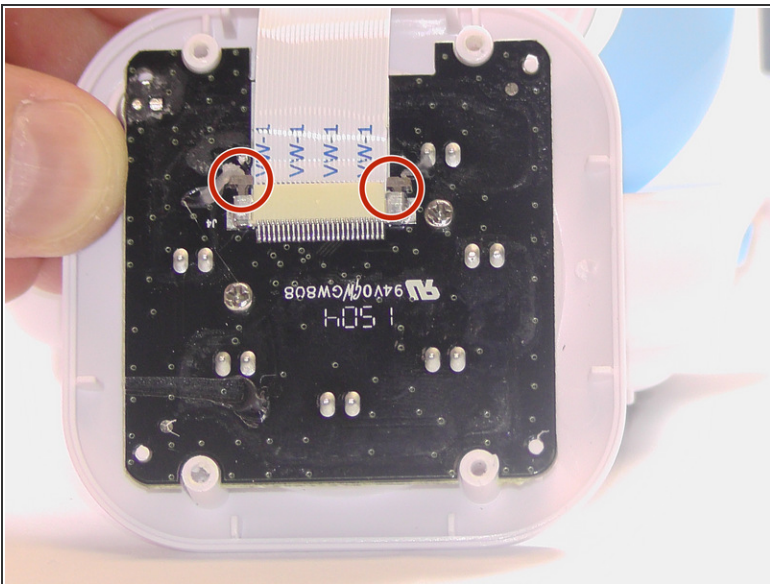

- Pull up on the two beige tabs to the left and right of the ribbon connected to the camera.
- Pull the ribbon straight out from the camera.

Step 3

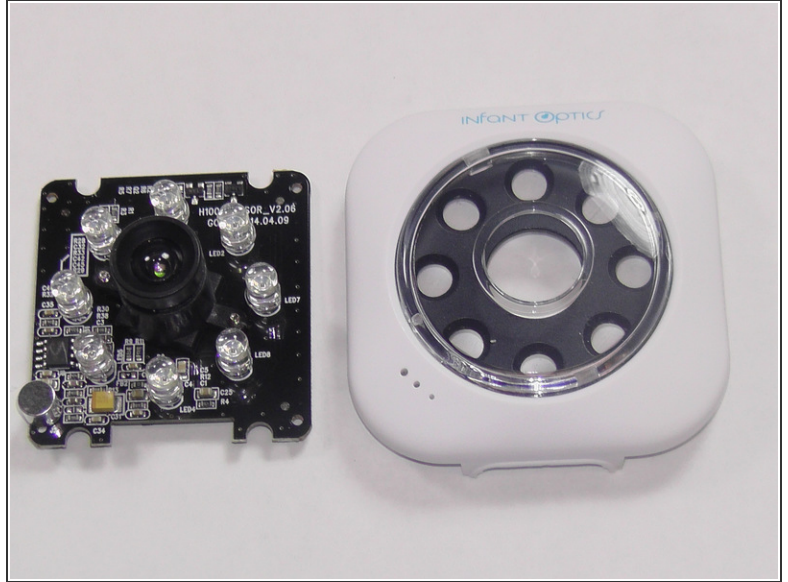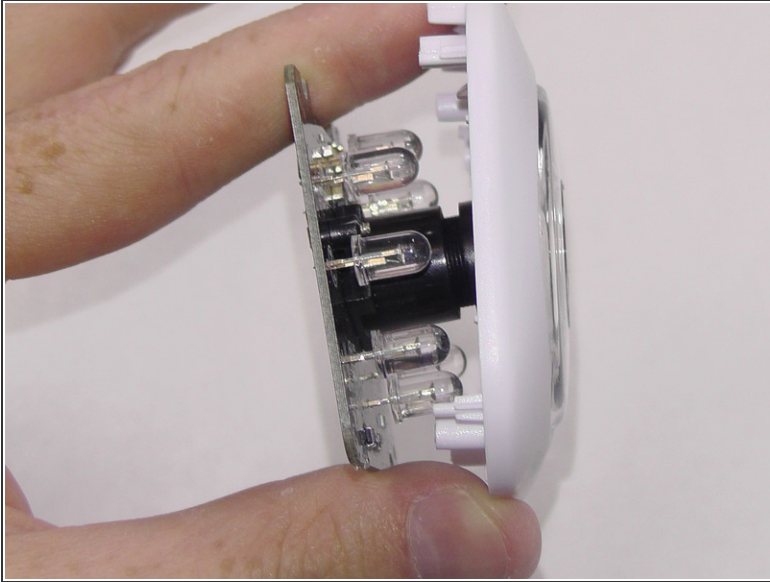

- Remove the front face plate of the camera unit by carefully pulling it off.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 04:47:16 AM.